




OWNER'S MANUAL

AARDWOLF

HORIZONTAL STONE LIFTING CLAMP

AHLC-730

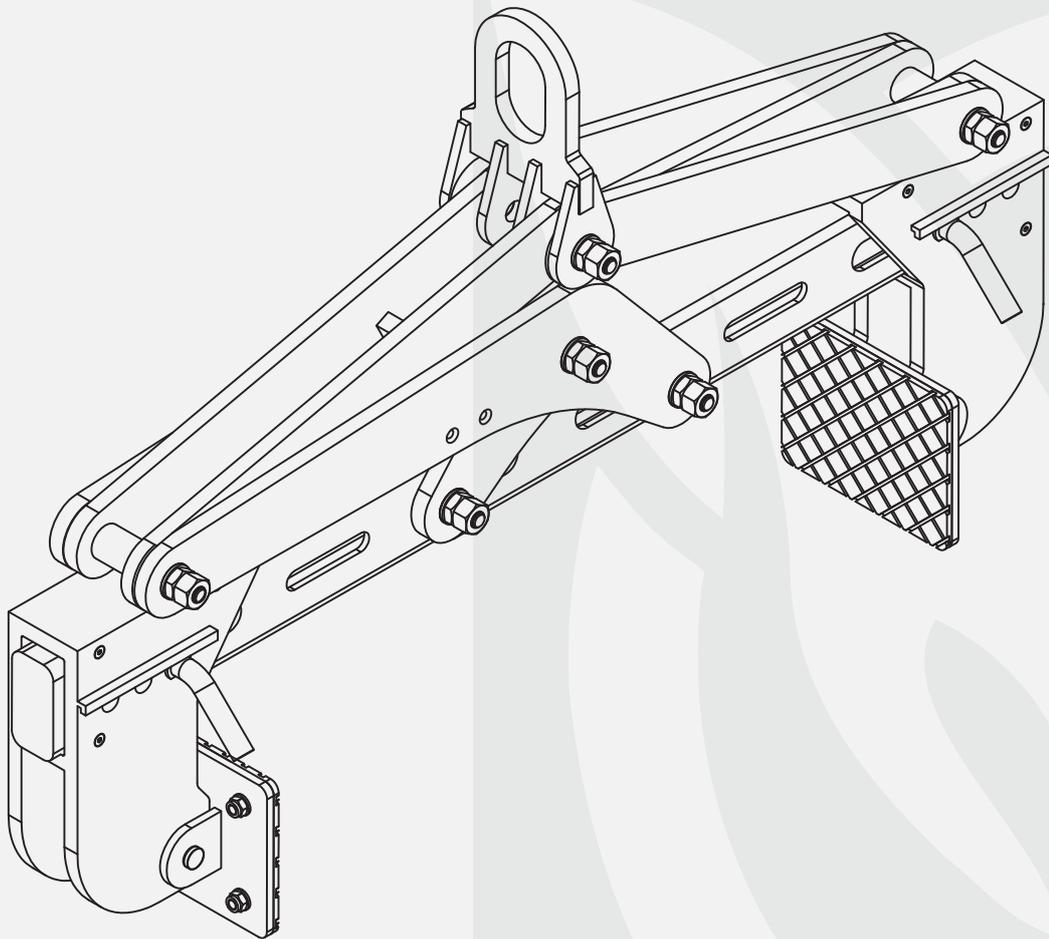

The Horizontal Stone Lifting Clamp 730 is a hoisting accessory for lifting and moving large dimension stone, concrete slabs, and blocks. This clamp incorporates a latch that automatically releases the lifter from the load once the load has been fully lowered to the ground.


The purpose of this manual is to assist you in the correct use of the Horizontal Stone Lifting Clamp and to provide information on its safe use. It must be used only for this using purpose.

SAFETY INSTRUCTIONS

To ensure safety during operation, you must carefully read these instructions to avoid injury, death or damage while using the AHLIC-730:

- Determine whether the capacity of a crane hook or forklift boom is suitable for use with the lifter.
- Determine the capacity of the crane hook or forklift boom (when applicable) that is suitable for the maximum load weight plus clamp weight.
- Perform a load test for the lifter before handling the load.
- Carefully read the device manual before operating.
- Only competent and authorized personnel should operate the device.
- Follow the safety regulations stipulated by local authorities.
- Ensure that the manual is available during operation.
- Always wear appropriate protective equipment like helmets, gloves, and safety boots. Always check the clamp. If the clamp is worn or damaged, do not use it.
- Make sure that the surface of the clamping jaws is clean.
- Perform the load test to ensure that the lifter is safe before using it. The load must not exceed the maximum allowable weight specified as shown on the lifter.
- The load must be a single slab with a smooth or rough and non-porous surface.
- Size of the load must be within gripping range specified from the manufacturer.
- The grip depends on friction so do not lift the wet block and lifting the wet block may cause the rubber pads to lose their grip. It must be checked that the rubber pads are free from dirt, and grease.
- Do a risk assessment of the material that is being lifted. The load must be free of fractures and other defects that may cause the slabs to fall apart while being lifted.
- Connections or individual parts of hoisting accessories should never be able to loosen by themselves.
- Defect hoisting accessories are no longer to be used.
- To avoid injury, no one is allowed to stand under the load.
- Do not carry out any lifting operations if any issues are found.
- Never operate a lifter that is damaged, malfunctioning or missing parts.
- Never operate a lifter if the tables for load capacity or any other warnings are missing, obscure or unclear.
- All inspections and tests must be carried out before lifting.
- Make sure that there are no obstructions during the working process.
- It is important to ensure that regular examinations and inspections of lifting gear are undertaken to ensure maintenance is kept, and to verify that the equipment can continue to be safely used.
- Lifting gear inspections must be undertaken on a regular basis, by a person with adequate training, knowledge, skills and expertise.


DRAWING LIST

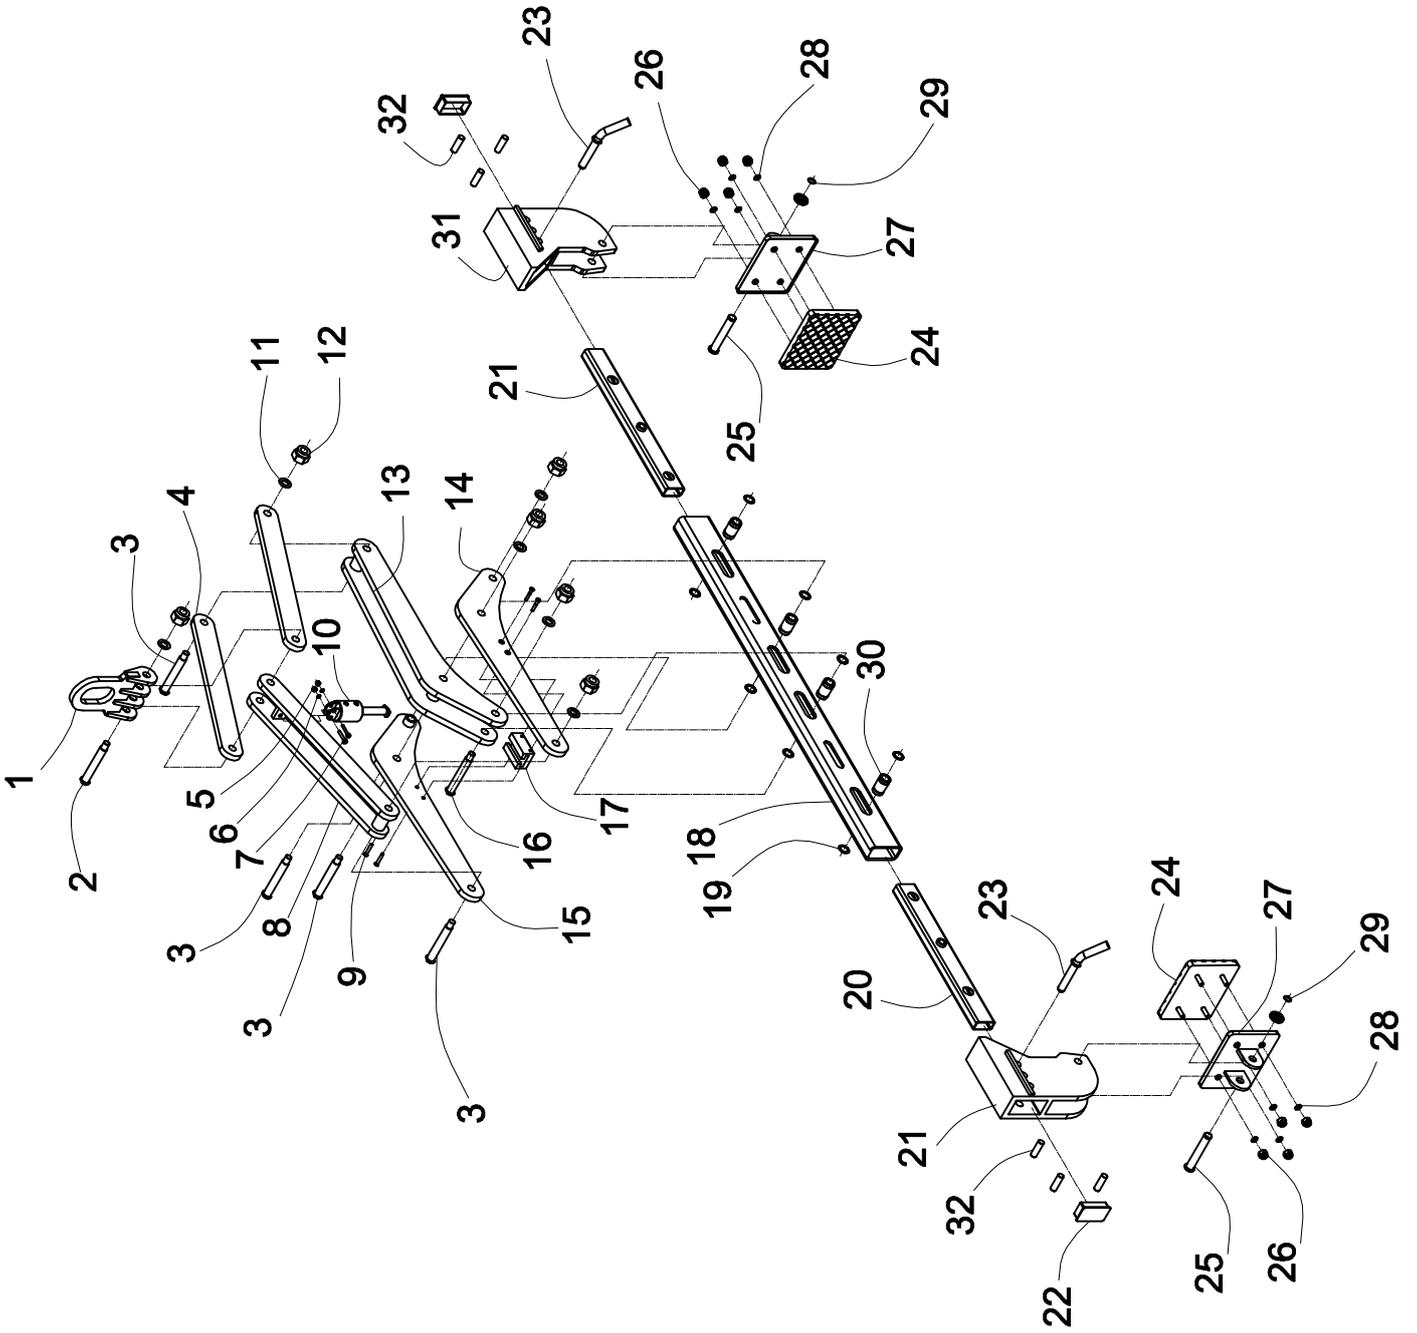

PARTS LIST

POS.	CODE	DESCRIPTION	Q'TY
1	AHLC730 - 001	Hook	01
2	AHLC730 - 002	Pin 1	01
3	AHLC730 - 003	Pin 2	04
4	AHLC730 - 004	Right Upper Arm	02
5	AHLC730 - 005	Hexagon Nylon Nut M8	02
6	AHLC730 - 006	Washer Ø8	02
7	AHLC730 - 007	Socket Head Cap Screw M8x40	02
8	AHLC730 - 008	Left Upper Arm	01
9	AHLC730 - 009	Countersunk Screw M8x30	04
10	AHLC730 - 010	Locking Body	01
11	AHLC730 - 011	Washer Ø20	16
12	AHLC730 - 012	Hexagon Nylon Nut M20	06
13	AHLC730 - 013	Right Lower Arm	01
14	AHLC730 - 014	Left Lower Arm 1	01
15	AHLC730 - 015	Left Lower Arm 2	01
16	AHLC730 - 016	Pin 3	01
17	AHLC730 - 017	Locking Base	01
18	AHLC730 - 018	Cross Bar	01
19	AHLC730 - 019	Circlips Ø30	08
20	AHLC730 - 020	Slide Bar	02
21	AHLC730 - 021	Left Arm	01
22	AHLC730 - 022	Plastic Cap 100x50x6	02
23	AHLC730 - 023	Pin 4	02
24	AHLC730 - 024	Rubber Pad	02
25	AHLC730 - 025	Pin 5	02
26	AHLC730 - 026	Nylon Nut M10	08
27	AHLC730 - 027	Jaw	02
28	AHLC730 - 028	Washer Ø10	08
29	AHLC730 - 029	Circlips Ø20	02
30	AHLC730 - 030	Bush	04
31	AHLC730 - 031	Right Arm	01
32	AHLC730 - 032	Steel Ball	06

DIMENSIONS

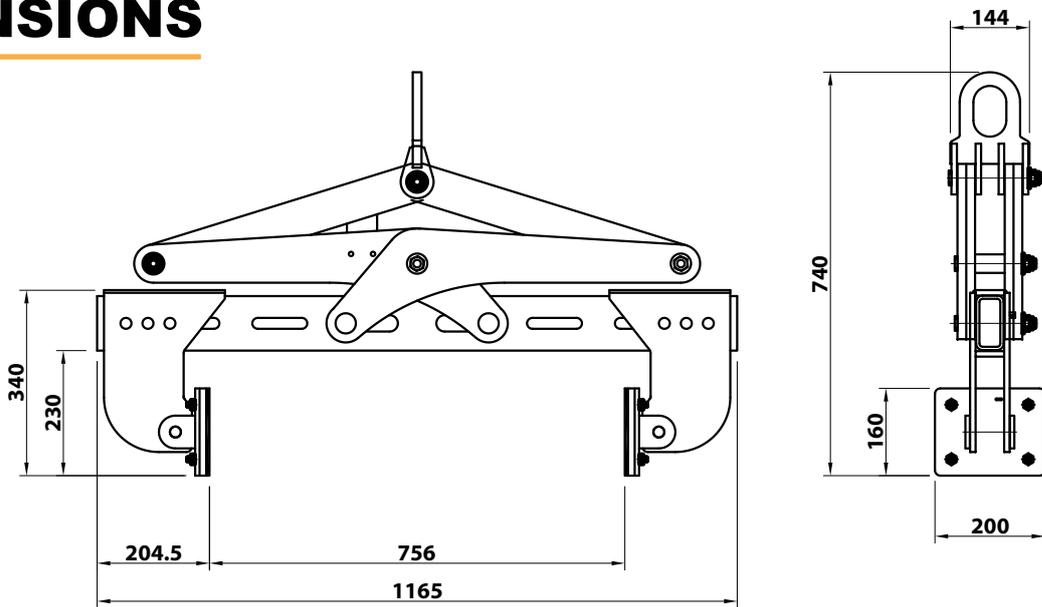

SPECIFICATIONS

AHLC-730	Metric	Imperial
Grip range	280 - 730 mm	11 - 28 in
Working load limit	1500 kg	3307 lb
Net weight	112 kg	247 lb
Gross weight	123 kg	271 lb
Packaging dimensions	1410 x 530 x 330 mm	55.5 x 20.9 x 13 in

FEATURES

- Adjustable jaw opening width.
- A large gripping range, making it suitable for a wide range of applications.
- Long-lasting, high friction replaceable Polyurethane gripping pads.
- Lifting eye for attaching to a crane hook.
- Auto locks and unlocks the load.

Optional extra: The rotating pad and limit stop can be sold upon request.

Strengths of the rotating pad and limit stop:

- The horizontal stone lifting clamp with rotating pads and limit stop is a special lifting clamp that can optimize the working efficiency. The clamp can be worked well when rotating and lifting the material in horizontal and vertical directions.
- The limit stop provides the exactly distance between the clamp and the material, allowing the material can be moved within the narrow space in the comfortable manner.
- The rotating pads can be changed quickly for rotating the concrete block easily & safely.

INSTRUCTIONS FOR USE

The Horizontal Stone Lifting Clamp works perfectly and effectively for lifting and transporting a large stone slab. Before use & during the working process, you must adhere to the instructions below:

STEP 1: Connect the Horizontal Stone Lifting Clamp 730 to a crane hook or forklift boom to start.



STEP 2: Move the device to the material being lifted.




STEP 3: Adjust the gripping range of the lifter so that it is suitable for size of block to pick up.



STEP 4: The position of the clamp is square with the block to be lifted and the load is balanced.



STEP 5: Lower the lifter onto the load and make sure that the block is inserted to full depth into the clamping jaws of the clamp.

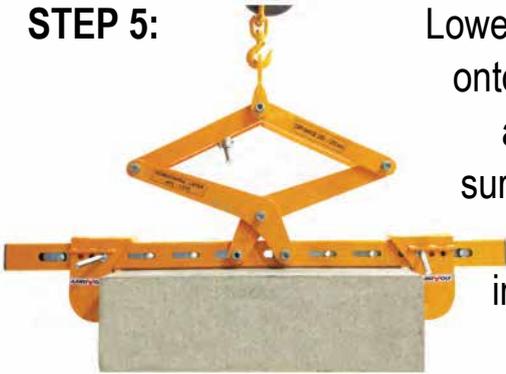

STEP 6: Raise the hoist to allow clamping jaws to close onto the load. Then lift and move the block slowly so that the load is balanced to desired location.



STEP 7: Place it down and the latch on the left upper arm will automatically lock the lifter. You raise the hoist to remove the lifter out of the material.



INSPECTIONS, MAINTENANCE AND REPAIR

How to protect and increase life expectancy for the clamp? Below are guidelines that will be the best ways that you need to follow:

INSPECTIONS:

Check the AHLC-730 regularly to make sure it does not exhibit the following faults:

- Check the lifter's structure for visual damage.
- Check the rubber pads to ensure they are clean.
- Check for unusual vibrations or noise while operating the lifter.
- Check the entire lifter for cracks, cuts, corrosion or any deficiency.
- Check that the lifter has no missing parts.
- Check that the edges of the lifter are not cut or damaged while sealing.
- Repair all faults before using the clamp.

MAINTENANCE:

Good maintenance planning will bring benefits to your clamp. It not only increases safety and using values but also reduce maintenance cost. So what should you do?

- Perform maintenance periodically.
- Perform simple maintenance tasks for the lifter, such as repairing, and replacing grease so that the lifter runs smoothly.
- Check the rubber pads to ensure that they are free from dirt and that the edges of the rubber pads are not cut or damaged.
- If the lifter is used for less than one day in two weeks, you should perform an inspection and maintenance to ensure that the lifter is safe and does not have any faults.
- The lifter may experience normal wear and tear and aging. You should replace any reduced quality parts with new original parts.
- The lifter and hoisting accessories must be stored in a place where they are protected against weather conditions and aggressive substances.

CE – Declaration of conformity:

we declare that the lifter is in conformity with the following standard:

The Machinery Directive 2006/42/EC.

Note: It is the responsibility of the user to adapt to state or local laws. The end user is responsible for using the equipment safely in the manner it is designed for and within the rated capacity of the unit.

WARRANTY

After receiving the product, the buyer should check, based on the spare parts list and spare drawings attached to the product, that the spare parts have not been damaged or lost during shipment. Any damages or losses must be officially reported to The Aardwolf Industries LLC within eight days from the date of purchase.

This lifter is granted a 12-month warranty based on Aardwolf Industries LLC's warranty policy from the date of purchase.

The warranty coverage is not applicable if:

- The lifter is handled incorrectly during maneuvering.
- The user fails to comply with the instructions in this booklet.
- The lifter's maximum permissible capacity is exceeded.
- The specifications for stone thickness are not followed.
- Damages are due to inadequate maintenance and inspections.
- Damage is due to improper storage.
- Repairs were performed by the user without our permission.
- Unofficial spare parts were used.

DISCLAIMER:

The Aardwolf Industries LLC's warranty does not cover the incorrect assembly and misuse of the lifter, the lack of maintenance and repair of the lifter as scheduled by the manufacturer, the operation carried out by non-competent or non-authorized operators or unofficial spare parts being used or installed.



WE ARE PROVIDING

SIMPLE, REALIABLE, COST SAVING
AND **AWESOME IDEAS** FOR YOUR BUSINESS



AARDWOLF PRODUCT VIDEO
www.youtube.com/user/AardwolfGroup



FIND THE AARDWOLF SERVICE CENTRE NEAR YOU

AUSTRALIA

1/5 Stanton Road, Seven Hills NSW 2147

Tel: 02 9838 8427

www.aardwolfaustralia.com Email: enquiries@aardwolfaustralia.com

BULGARIA Str.Usta Kolio Ficheto 33 Tel: +359 887 933 754

INDIA

Harmara Road, Industrial Area, Madanganj, Kishangarh, District- Ajmer, Rajasthan India 305801

Tel: +91 73000 68444

Web: www.aardwolf.co.in

Email: sales@aardwolf.co.in

GERMANY

Schulze-Delitzsch-Weg 2, 33175 Bad Lippspringe

Tel: 05252 8382830

USA

19201 South Reyes Avenue, Suite A3 Rancho Dominguez California,

Tel: (562) 553-6050

90221

Web: www.aardwolfusa.com

Email: leo@aardwolfusa.com

VIETNAM

1B, An Phu, Thuan An City, Binh Duong Province, Vietnam

Tel: +84 931 707 793

Web: www.aardwolf.com.au

Email: info@aardwolf.com.au